


ASSEMBLY INSTRUCTIONS MODEL: FOLEGANDROS 6x6

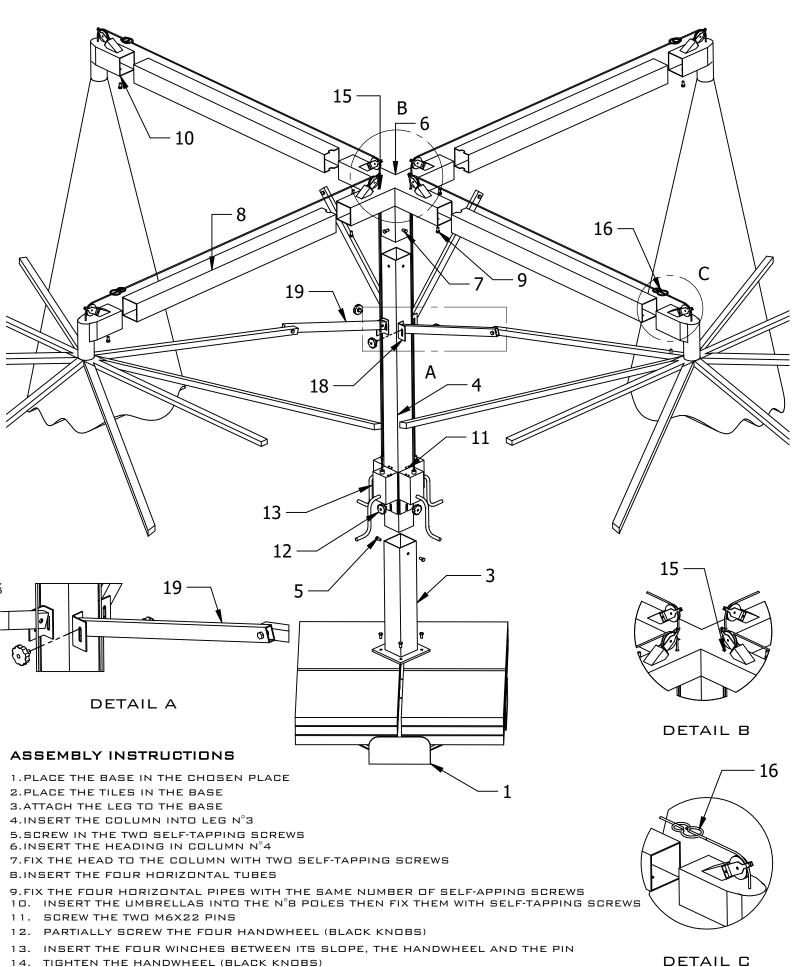

19. FIX THE ROD TO THE CORNERS. BEFORE CLOSING THE UMBRELLA, DETACH THE ROD FROM THE CORNERS

PASS THE WINCH CABLES THROUGH THE HOLES IN THE HEAD

16. ATTACH THE CABLES TO THOSE OF THE UMBRELLAS

18. ATTACH THE CORNERS TO THE CENTRAL COLUMN

17. OPEN UMBRELLAS CAREFULLY